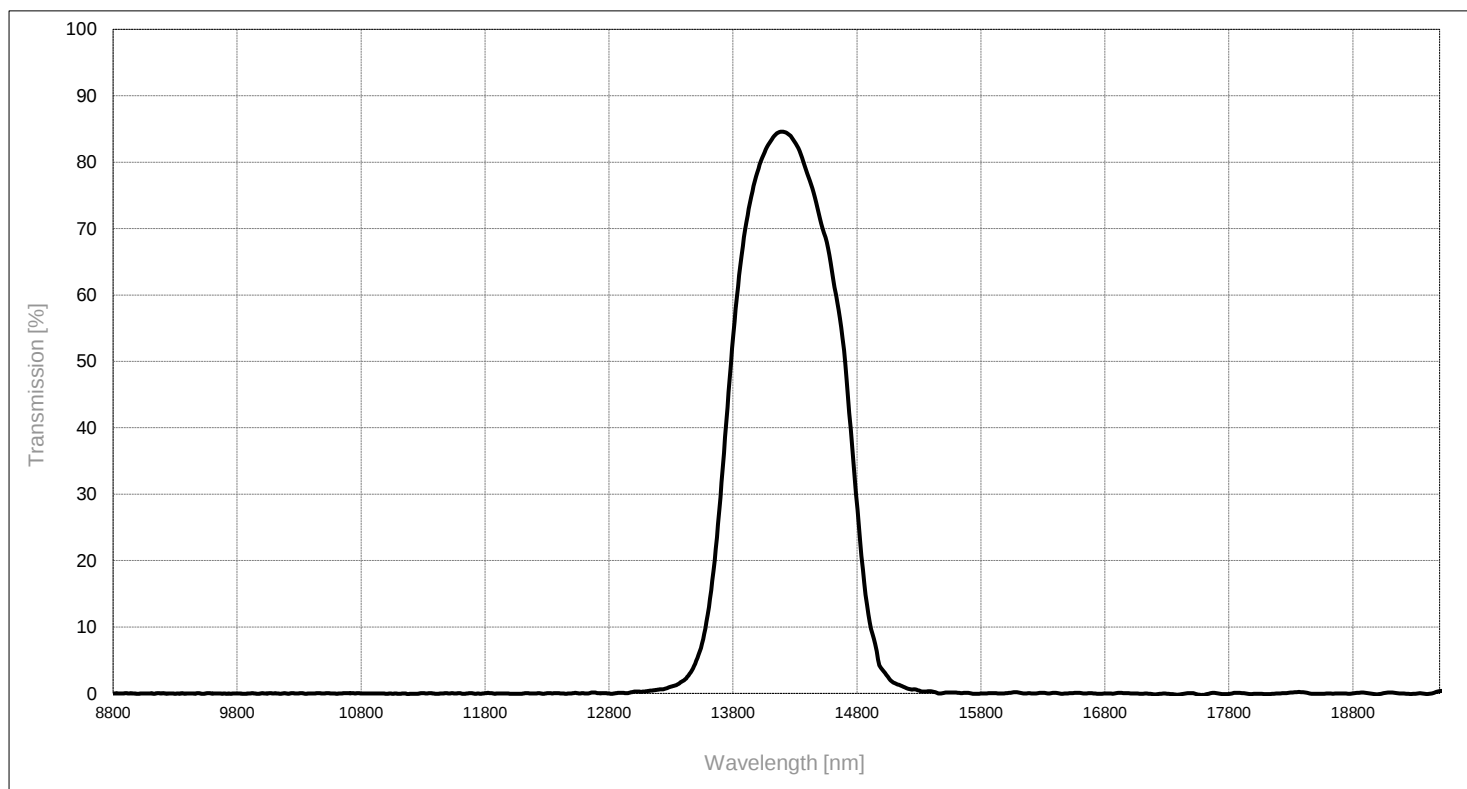


**Measured values:**

CWL = 14244,91 nm...OK
HW = 986,2 nm...OK
Cuton 5 % = 13506,5 nm
Cutoff 5 % = 14971,26 nm
HP1 = 13751,81 nm
HP2 = 14738,01 nm
Tpeak = 84,59 %
Tavg = 80,84 %
Slope 1 = 2,7 %
Slope 2 = 2,83 %

Transmittance:

T high min 13949 — 14491 nm = 84,59 %...OK

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2023-09-28

Operator:

Article:

Art no: 713M

BP-14138-1056 nm Ø25.4x1.0 mm

Specifications:

CWL: 14138 ±160 nm

HW: 1056 ±160 nm

Blocking: 100 — 21000 nm (%)

T high min 70 %

Measurement conditions:

Temperature: 296 K AOI: 0 °

Spectrogon:

T nr: 71314

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.