

SPECTROGON

Optical filters • Coatings • Gratings

Article:

BP-1695-097 nm

Specifications:

CWL: +10/-10 nm

HW: +10/-10 nm


Tmin: 70 %

Blocking: 3500 nm

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

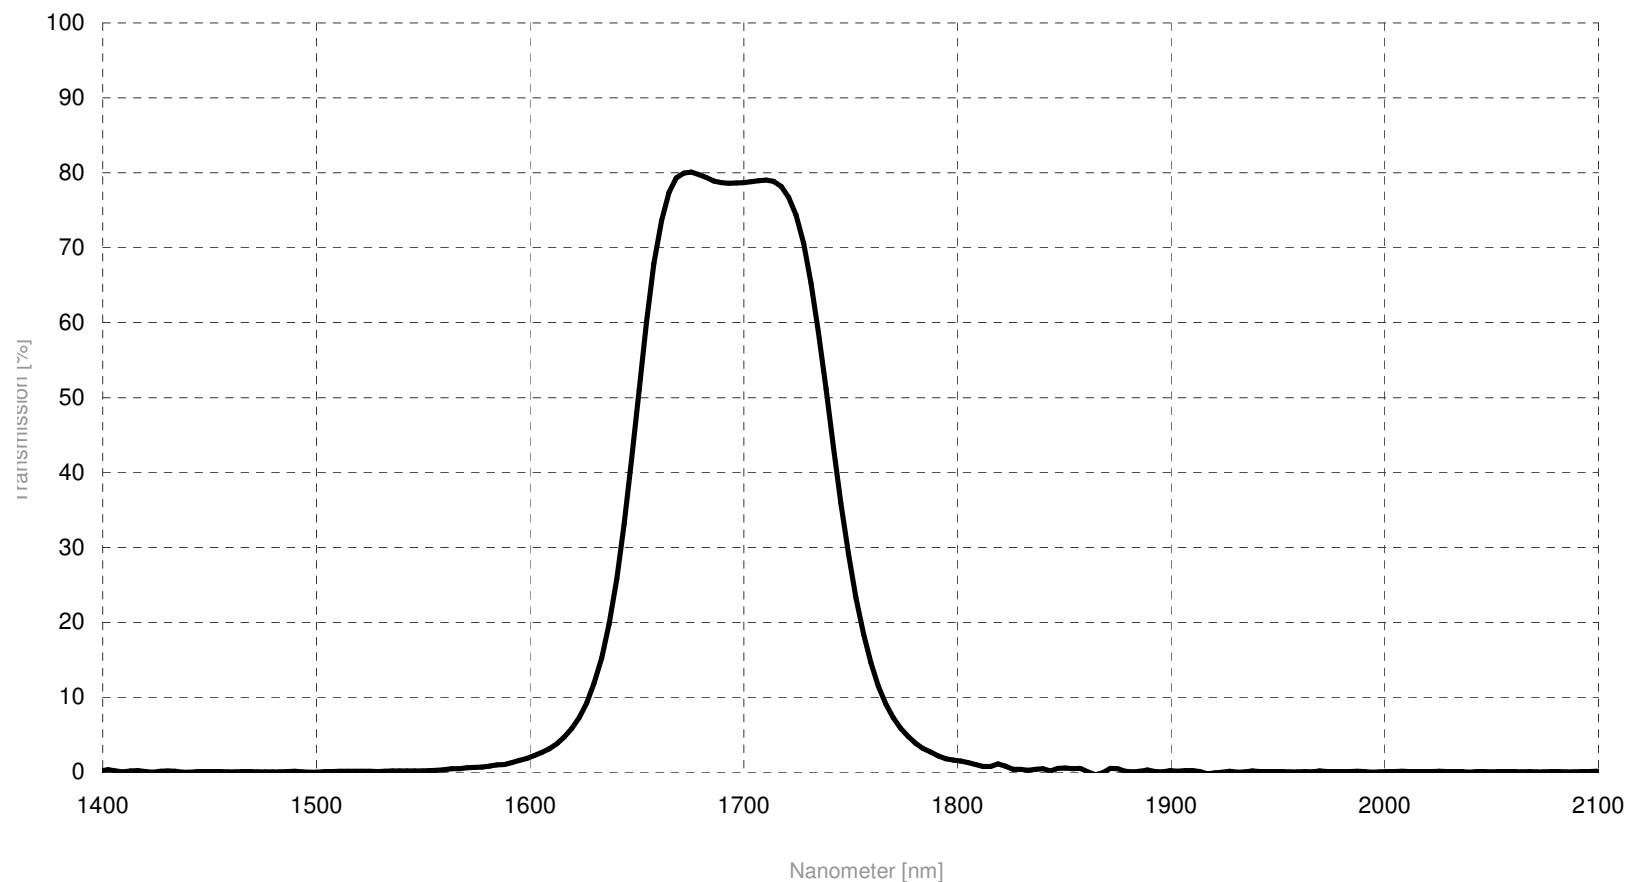

Actual values:

CWL = 1695,2 nm

HW = 96,7 nm

Cuton 5% = 1617 nm

Cutoff 5% = 1776,2 nm

HP1 = 1646,8 nm

HP2 = 1743,6 nm

Tpeak = 80,09 %

Tavg = 78,31 %

Slope 1 = 2,4 %

Slope 2 = 2,5 %

Data collection range: 1200 - 2400 nm

Diagram range: 1400 - 2100 nm

Ref: 4-5515

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.