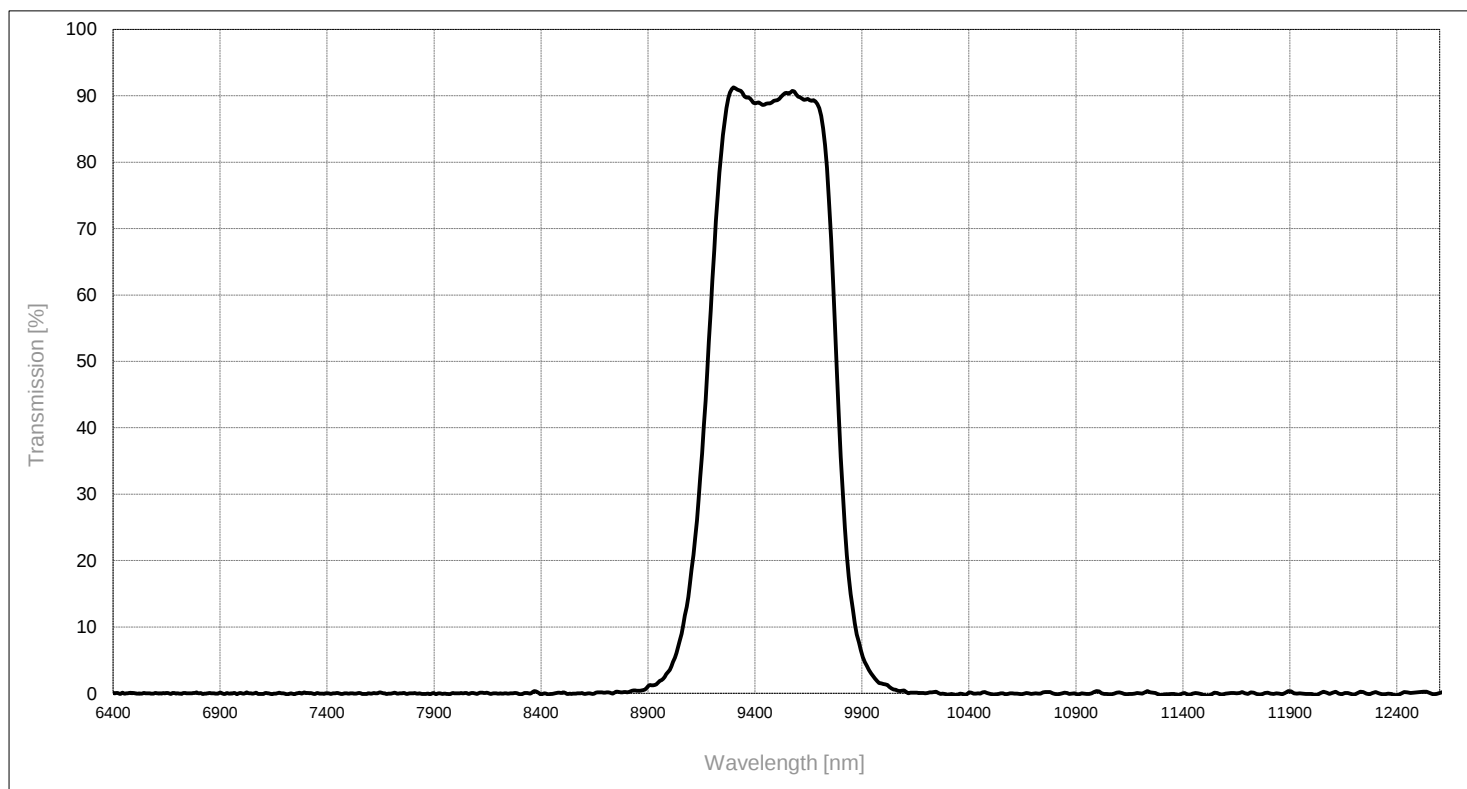


**Measured values:**

CWL = 9479,19 nm...OK
HW = 615,16 nm...OK
Cuton 5 % = 9020,35 nm
Cutoff 5 % = 9910,18 nm
HP1 = 9171,61 nm
HP2 = 9786,77 nm
Tpeak = 91,25 %
Tavg = 89,68 %
Slope 1 = 2,18 %
Slope 2 = 1,66 %

Transmittance:

T high min 9274 — 9696 nm = 91,25 %...OK

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2023-08-14

Operator:

Article:

Art no: 713M

BP-9480-613 nm Ø25.4x1.0 mm

Specifications:

CWL: 9480 ±80 nm

HW: 613 ±100 nm

Blocking: 100 — 16000 nm (%)

T high min 70 %

Measurement conditions:

Temperature: 296 K AOI: 0 °

Spectrogon:

T nr: 71270

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.