


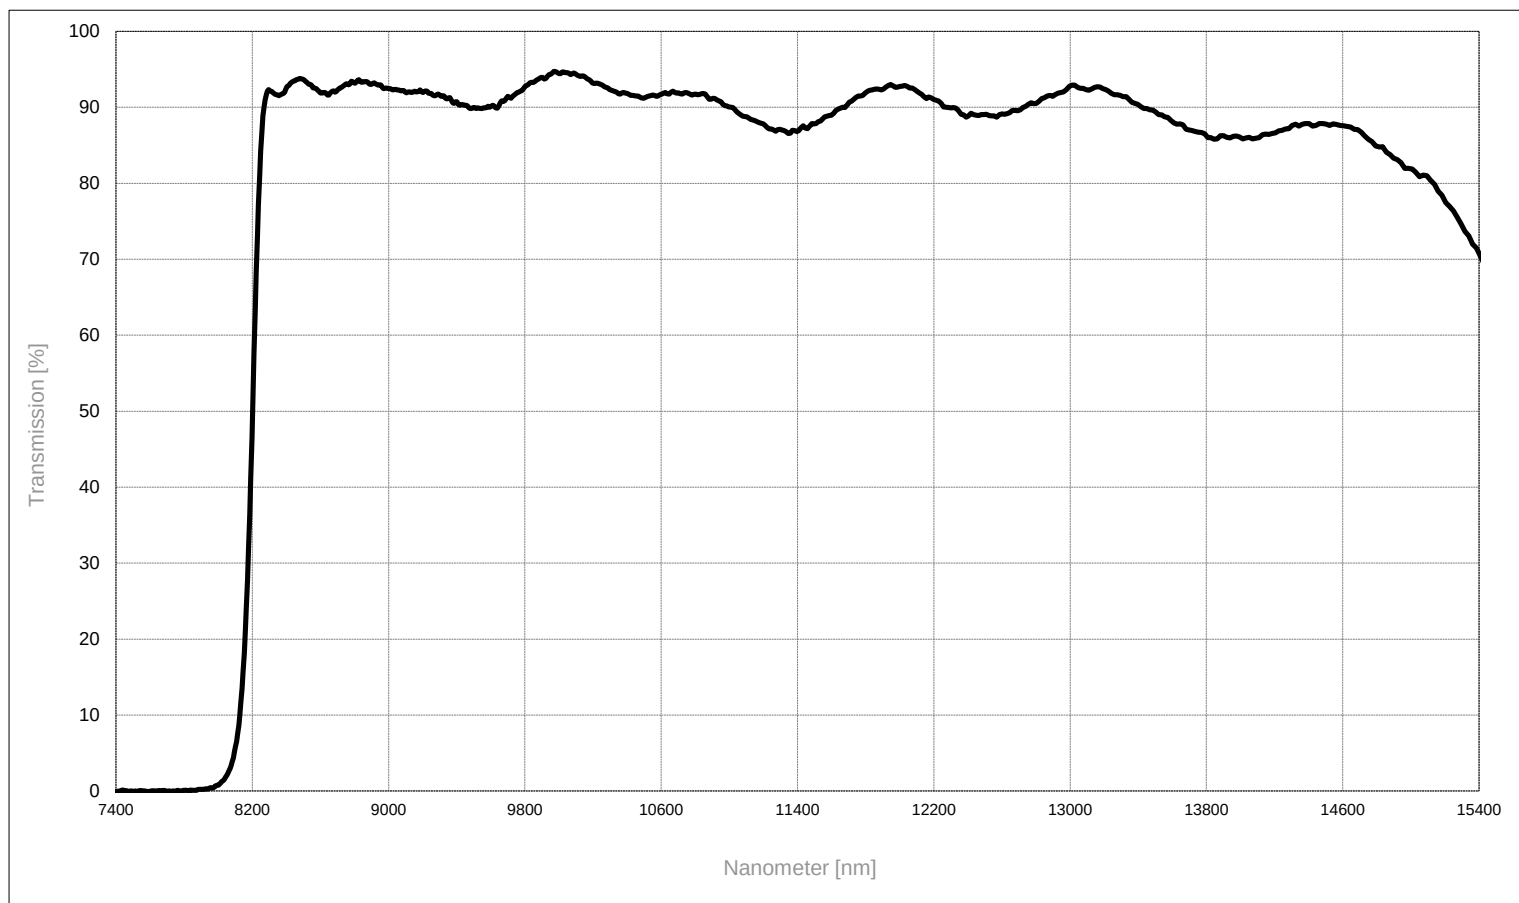

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2016-09-02

Operator: ND

Article:

Art no: 713M

LP-8110 nm Ø25.4x0.5 mm

Specifications:

Cuton 5 %: 8110 ±100 nm

Tavg: >75 %

Blocking: 200 nm (OD 3)

Trange: 15000 nm

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

Measured values:

Cuton 5 % = 8093,84 nm...OK

HP1 = 8196,07 nm

Tavg = 90,9 %...OK

Slope 1 = 1,7 %

Data collection range: 1282 - 27005 nm

Spectrogon:

M nr: 34126

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.