

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2018-11-02

Operator: DH

Article:

Art no: 711M

NB-0325-010 nm Ø25.4x3.0 mm

Specifications:

CWL: 325 ±3 nm

HW: 10 ±5 nm


Tmin: 50 %

Blocking: 200 - 1200 nm (OD 3)

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

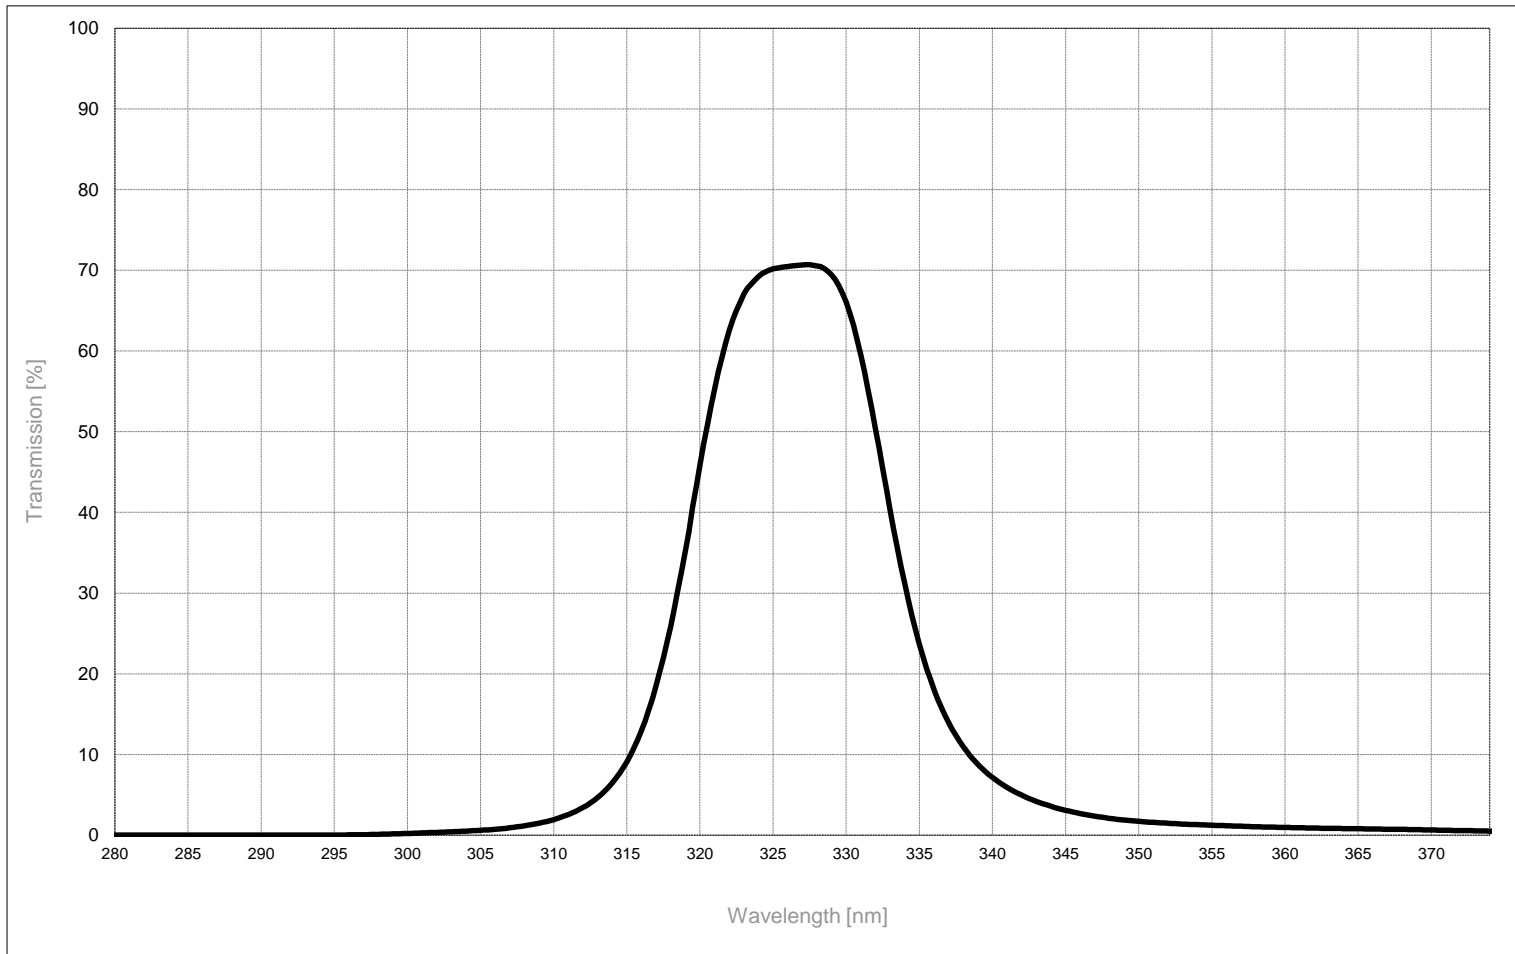

Measured values:

CWL = 326,27 nm...OK

HW = 14,5 nm...OK

Cuton 5 % = 313,23 nm

Cutoff 5 % = 341,95 nm

HP1 = 319,02 nm

HP2 = 333,52 nm

Tpeak = 70,71 %...OK

Tavg = 68,81 %

Slope 1 = 2,47 %

Slope 2 = 3,2 %

Spectrogon:

M nr: 46970

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.